



PARTS LIST

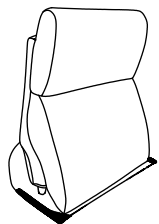

AX1

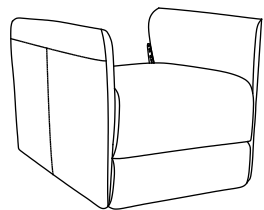


BX1



CX1



 DX4




EX4




FX4


Step1

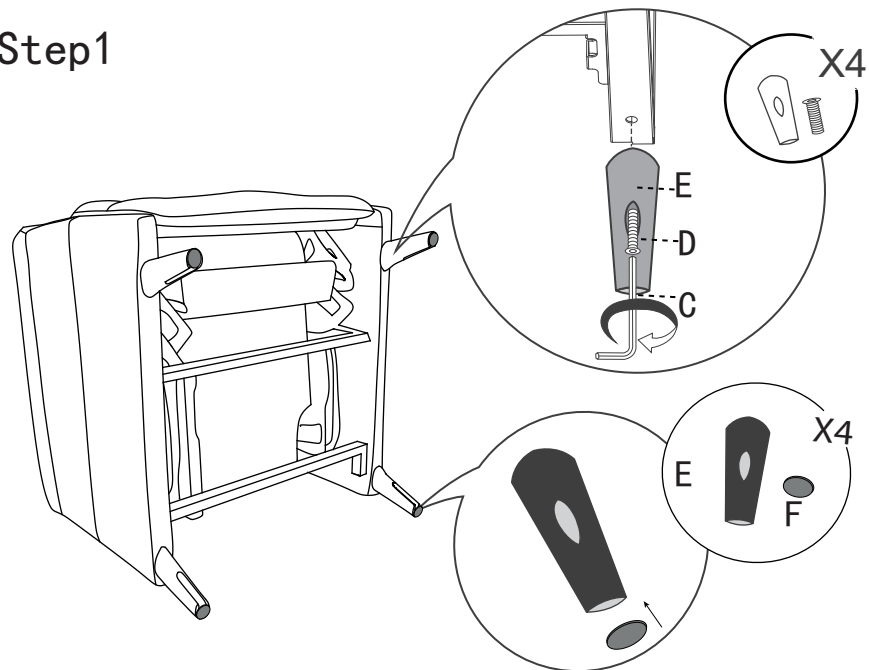

Step2

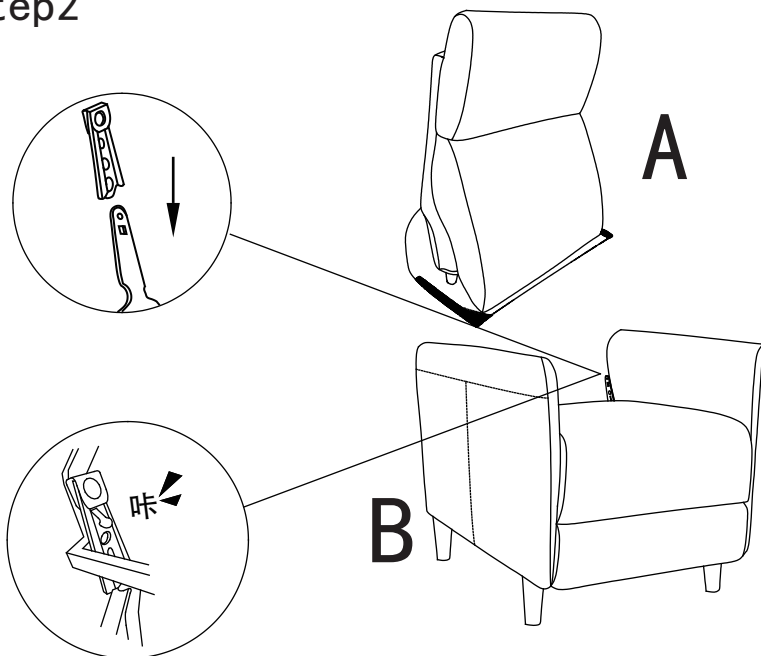

Assembly completed

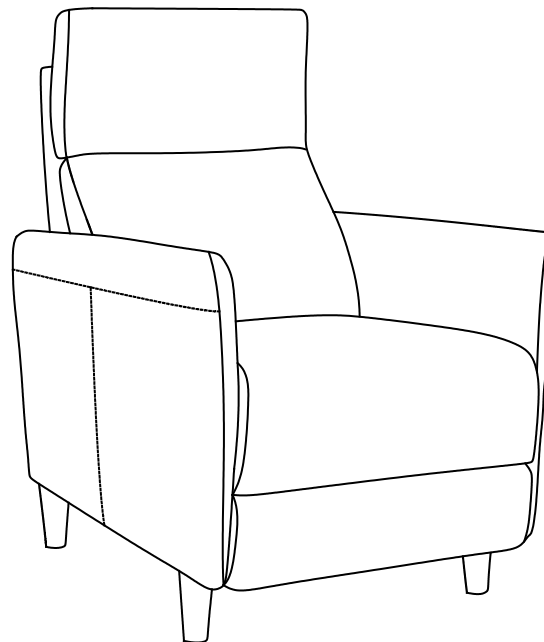

Assembly

instructions