

ASSEMBLY INSTRUCTION

①

②

③

④

⑤

Note: The wrench needs to be removed after assembly

⑥

Ax1	Bx1	Cx1	Dx1	Ex1
Fx1	Gx12	Hx4	Ix2	Jx6
Kx1	Lx2			