






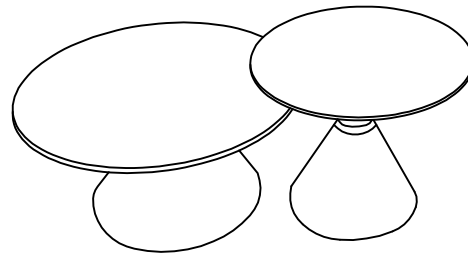

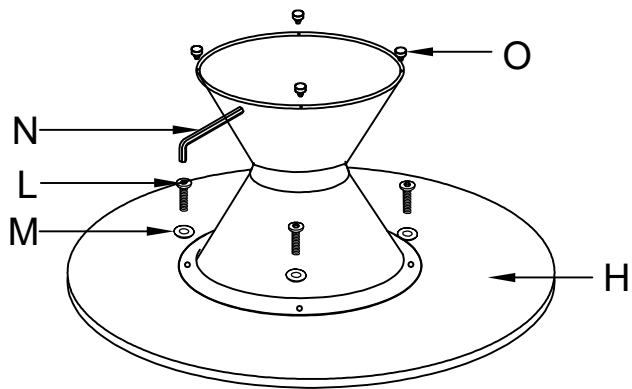

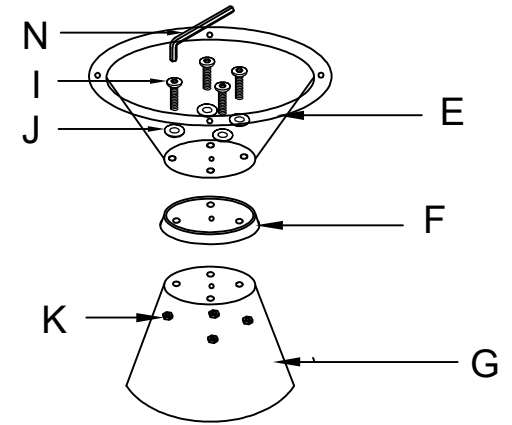

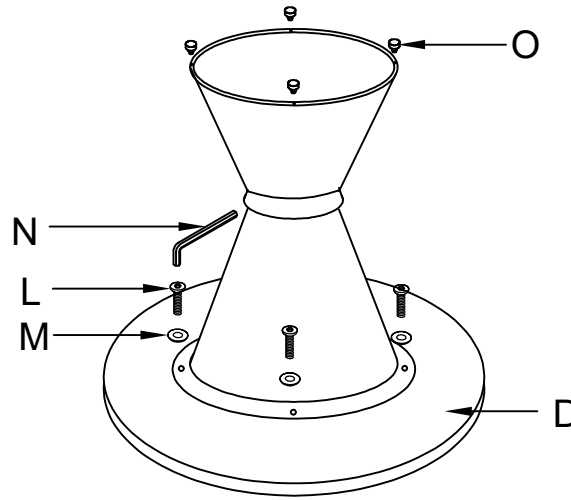

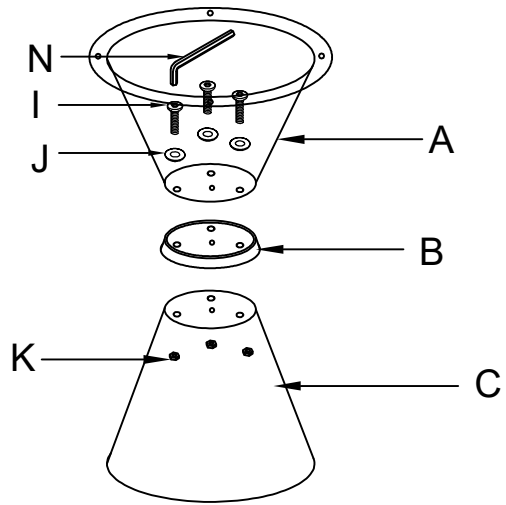





# sofaforma

ASSEMBLY INSTRUCTIONS  
MODEL NO. : TANGO



A . X1 	B . X1 	C . X1 
D . X1 	E . X1 	F . X1 
G . X1 	H . X1 	I . X7 
J . X7 	K . X7 	L . X8 
M . X8 	N . X1 	O . X8 