
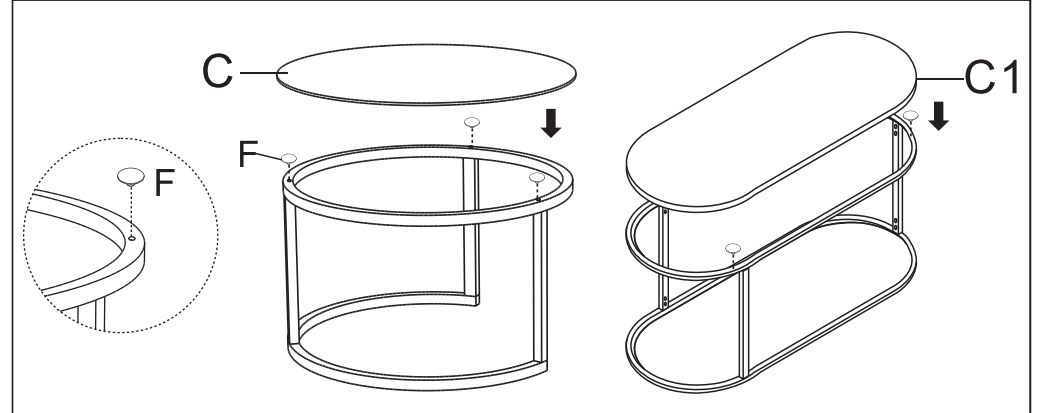
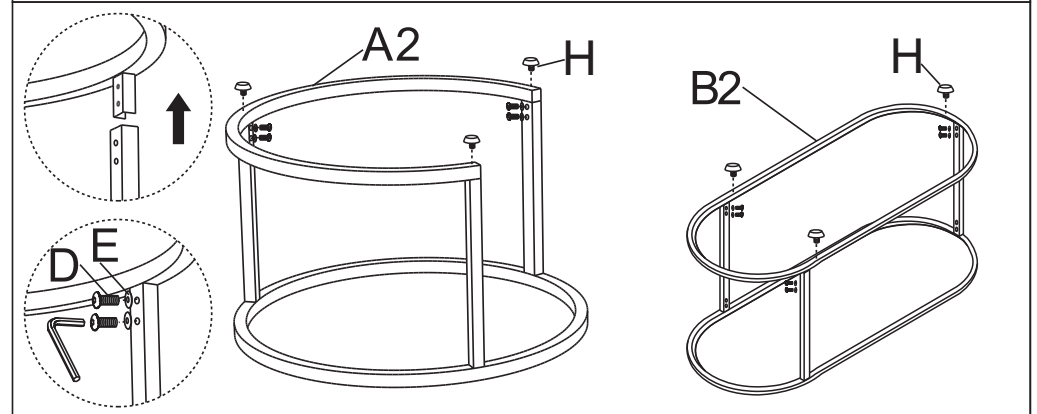
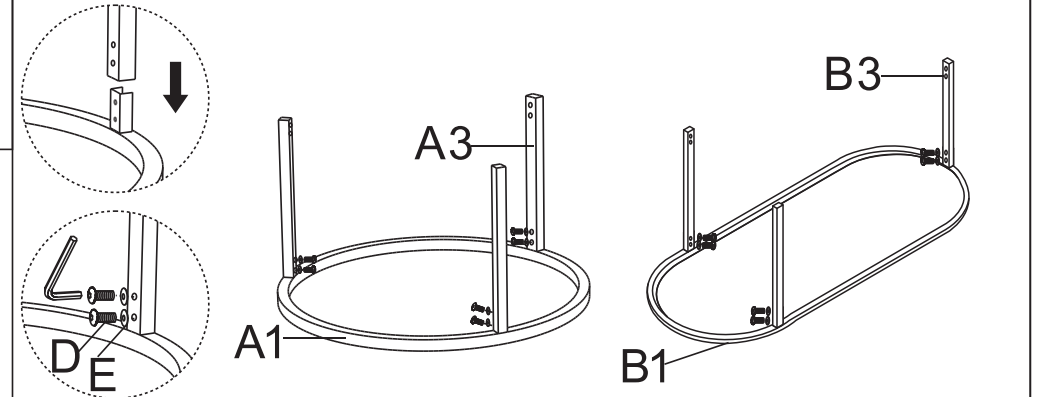
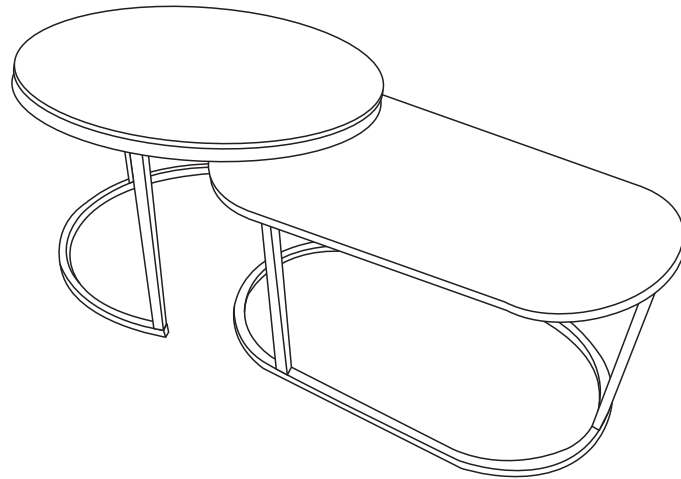
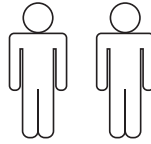


sofaforma

ASSEMBLY INSTRUCTIONS
MODEL NO.: BRAMANTE



A1  x1	A2  x1	A3  x3	B1  x1
B2  x1	B3  x3	C  x1	C1  x1
D  x24	E  x24	F  x6	G  x1
H  x6			