


sofaforma

ASSEMBLY INSTRUCTIONS

Model No.: NONA




Ax1



Bx1

M6x16mm



Cx4

Ø6xØ16mm




Dx4




Ex1

1

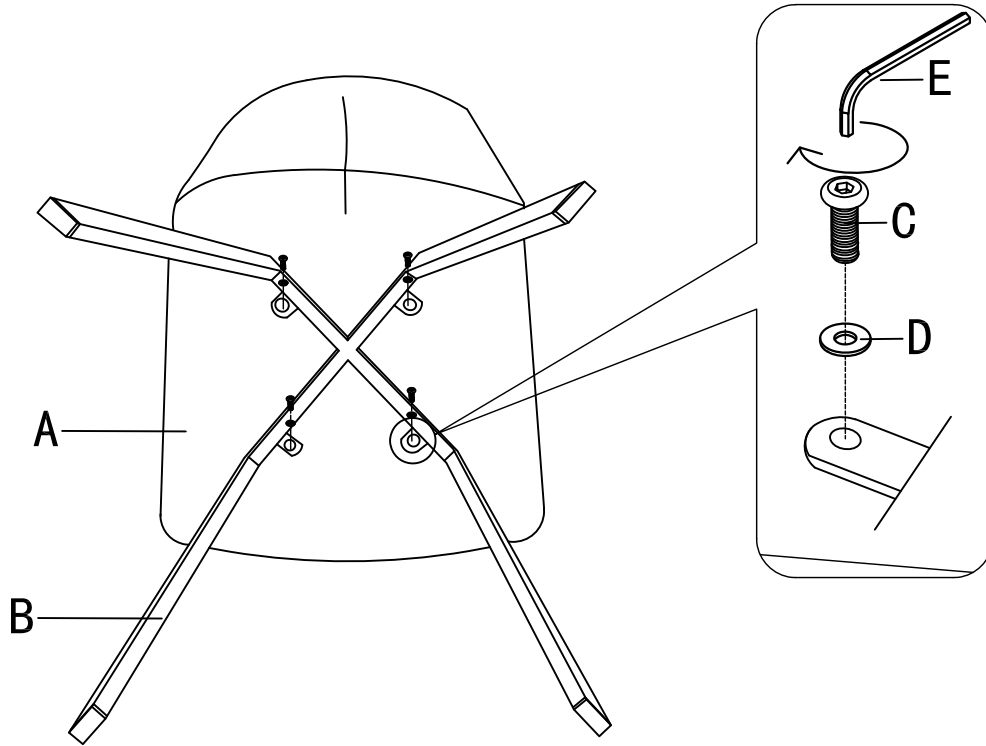

2

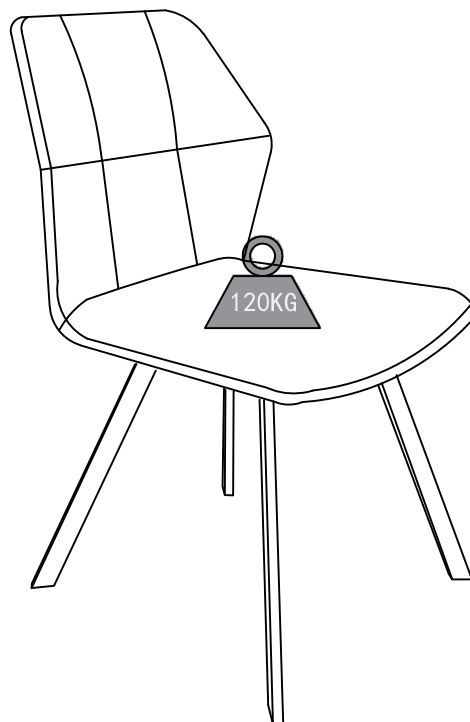

MAX BEARING WEIGHT:120KGS